

### How to Play a VideoTape or DVD

#### Overview

Formats that can be played :

- All region playback
- VHS Hi Fi , VHS Lp
- DVD-R, JPEG, MP3, CD-R/RW
- Australian + American standards PAL + NTSC



#### How to Playback a VHS tape or DVD :

Control Panel :

- On Control Panel- Select DVD or VHS



Screen will come down and Projector will turn ON




- Insert VHS tape or DVD
- Press Play/FF/RW/Stop on control panel
- Adjust Volume and lights on control panel



Remote Control :

Some small rooms will only have a remote control for the projector.

- Insert VHS tape or DVD
- On the data Projector remote control Push Power ON 
- On the data Projector remote control Push Video 1 (Video Input)
- On the data Projector remote control adjust Volume (Volume + or -)
- Press Play/FF/RW/Stop on DVD/VCR combo or remote (if available).



For assistance :

Assistance is available by calling 59666 Opt1 and ask for AV assistance.

Training :

Training on equipment in rooms can be arranged at any time.  
Call Space Services Help Desk Phone: 612 55909