

How to operate the 35mm Slide Projector

Overview

Setting up

Set the carousel to the Zero position :

Loading the slides :

Load the carousel onto the projector :

Projector Functions

Lamp change lever :

Focus control :

Lens :

 
For assistance :

Training :

Slide projectors are available in selected theatres
Turn On the projector, load the slides into the carousel and uses the control panel or remote control to advance slides.



- Before loading the slides into the carousel tray check the base plate of the tray is locked at the 'zero position' by turning the carousel upside down and trying to rotate the base plate. When it 'locks' you can start loading the slides.



- Slides are loaded into the carousel by simply holding the slide right way round and turning it upside down before inserting it into one of the numbered slots on the carousel tray.



- Once the carousel is loaded, place it on top of the slide projector ensuring that the 'zero' position on the carousel lines up directly with the notch on the projector as this is the only position that the carousel can be loaded or removed.



- Slide projectors have two lamps. If one lamp fails during a presentation the spare lamp can be brought into operation quickly by operating the Lamp change lever.
- The focus control is usually located at the front of the lens on a Kodak projector or is a knob situated on the projector just above the lens housing on an Elmo projector.
- Slide projectors come with various lenses dependant upon what distance is being projected over. Some lenses also have a zoom function which allows a certain variation in picture size.

Assistance is available by calling 59666 Opt1 and ask for AV assistance.

Training on equipment in rooms can be arranged at any time.
Call Space Services Help Desk Phone: 612 55909