


### How to use the Control Panel

#### Overview

Many theatres have control panels which can control the Data projector, VCR/DVD, Lights, Screen, Input selection and Volume.

#### Touch panel

The AMX touch panels are controlled by simply touching the screen.

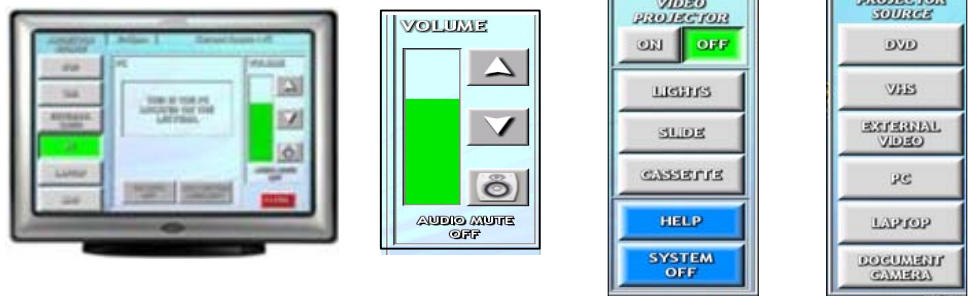

- Touch the screen to start if the panel is blank
- Touch menu button required.
- Touch control button.
- Touch System OFF when finished

#### Push Button Panel

Smaller theatres and rooms may have a push button panel. These panels will – Turn projector ON/OFF, select the projectors input source, adjust the volume and lower the screen.

- Press the projector ON/OFF button
- Select the Input- PC/DVD/Laptop etc
- The Volume is adjusted by rotating the volume knob as indicated.
- The screen will lower and raise automatically



For assistance :

Assistance is available by calling 59666 Opt1 and ask for AV assistance.

Training :

Training on equipment in rooms can be arranged at any time.  
Call Space Services Help Desk Phone: 612 55909